

DMX CHARTS

THEATRE

| Channel | 1 Ch | 2 Ch | 4 Ch "1" | 5 Ch "1" | 6 Ch | 10 Ch | 15 Ch | 17 Ch |
|---------|--------|--------------|--------------|--------------|--------------|--------------|--------------|---------------|
| 1 | DIMMER | DIMMER | DIMMER | DIMMER | DIMMER | DIMMER | DIMMER | DIMMER |
| 2 | | DIMMER SPEED | CTO | CTO | CTO | RED | DIMMER FINE | DIMMER FINE |
| 3 | | | HUE | HUE | HUE | GREEN | RED | STROBE |
| 4 | | | DIMMER SPEED | STROBE | STROBE | BLUE | RED FINE | CTO |
| 5 | | | | DIMMER SPEED | COLOR MACRO | WHITE | GREEN | HUE |
| 6 | | | | | DIMMER SPEED | CTO | GREEN FINE | CROSSFADE |
| 7 | | | | | | HUE | BLUE | RED |
| 8 | | | | | | STROBE | BLUE FINE | RED FINE |
| 9 | | | | | | COLOR MACRO | WHITE | GREEN |
| 10 | | | | | | DIMMER SPEED | WHITE FINE | GREEN FINE |
| 11 | | | | | | | CTO | BLUE |
| 12 | | | | | | | HUE | BLUE FINE |
| 13 | | | | | | | STROBE | WHITE |
| 14 | | | | | | | COLOR MACRO | WHITE FINE |
| 15 | | | | | | | DIMMER SPEED | COLOR MACRO |
| 16 | | | | | | | | CTO ON COLORS |
| 17 | | | | | | | | DIMMER SPEED |

THEATRE

| 1 Ch | 2 Ch | 4 Ch "1" | 5 Ch | 6 Ch "1" | 10 Ch "1" | 15 Ch "1" | 17 Ch | FUNCTION | DMX Value | Default |
|------|------|-------------|------|-------------|--------------|--------------|-------|--|---|---------|
| 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | DIMMER 0÷100% | 000 ÷ 255 | 000 |
| | | | | | | | 2 | DIMMER FINE 0÷100% | 000 ÷ 255 | 000 |
| | | | | | | | 3 | STROBE No Function (shutter open) Strobe effect slow to fast No Function (shutter open) Random strobe effect slow to fast No Function (shutter open) | 000 ÷ 030 031 ÷ 100 101 ÷ 130 131 ÷ 200 201 ÷ 255 | 255 |
| | | | | | | | 5 | HUE 25 to 0 0 0 to +25 | 000 ÷ 126 127 ÷ 127 128 ÷ 255 | 127 |
| | | | | | 2 | 3 | 7 | RED 0÷100% | 000 ÷ 255 | 000 |
| | | | | | | 4 | 8 | RED FINE 0÷100% | 000 ÷ 255 | 000 |
| | | | | | 3 | 5 | 9 | GREEN 0÷100% | 000 ÷ 255 | 000 |
| | | | | | | 6 | 10 | GREEN FINE 0÷100% | 000 ÷ 255 | 000 |
| | | | | | 4 | 7 | 11 | BLUE 0÷100% | 000 ÷ 255 | 000 |
| | | | | | | 8 | 12 | BLUE FINE 0÷100% | 000 ÷ 255 | 000 |
| | | | | | 5 | 9 | 13 | WHITE 0÷100% | 000 ÷ 255 | 000 |
| | | | | | | 10 | 14 | WHITE FINE 0÷100% | 000 ÷ 255 | 000 |
| | | 2 | 2 | 2 | | | 4 | CTO 2800K - 3200K 3200K - 3500K 3500K - 4000K 4000K - 4500K 4500K - 5000K 5000K - 5600K 5600K - 6000K 6000K - 6500K | 000 ÷ 031 032 ÷ 063 064 ÷ 095 096 ÷ 127 128 ÷ 159 160 ÷ 191 192 ÷ 223 224 ÷ 255 | 000 |
| | | | | | 6 | 11 | | CTO 2800K-3200K 3200K-3500K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K Color Mix | 000 ÷ 030 031 ÷ 060 061 ÷ 090 091 ÷ 120 121 ÷ 150 151 ÷ 180 181 ÷ 210 211 ÷ 240 241 ÷ 255 | 000 |
| | | 3 | 3 | 3 | 7 | 12 | | HUE 0 -25°÷25° | 000 ÷ 000 001 ÷ 255 | 000 |
| | | | | | | | 6 | CROSSFADE 0÷100% | 000 ÷ 255 | 000 |
| | | | 4 | 4 | 8 | 13 | 3 | STROBE No Function Strobe Slow to Fast | 000 ÷ 010 011 ÷ 255 | 000 |

| | | | | | | | | | | |
|--|---|---|---|---|----|----|----|---|---|-----|
| | | | | 5 | 9 | 14 | 15 | COLOR MACRO No Function Amber Shift on Color Macro | 000 ÷ 002 003 ÷ 005 006 ÷ 255 | 000 |
| | | | | | | | 16 | CTO ON COLORS 0÷100% | 000 ÷ 255 | 000 |
| | 2 | 4 | 5 | 6 | 10 | 15 | 17 | DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed) | 000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255 | 000 |

TOUR

| Channel | 4 Ch "2" | 6 Ch "2" | 10 Ch "2" | 15 Ch "2" |
|---------|----------|----------|-------------------|-------------------|
| 1 | RED | DIMMER | DIMMER | DIMMER |
| 2 | GREEN | RED | RED | DIMMER FINE |
| 3 | BLUE | GREEN | GREEN | RED |
| 4 | WHITE | BLUE | BLUE | RED FINE |
| 5 | | WHITE | WHITE | GREEN |
| 6 | | STROBE | STROBE | GREEN FINE |
| 7 | | | COLOR TEMPERATURE | BLUE |
| 8 | | | AUTO PROGRAM | BLUE FINE |
| 9 | | | AUTO SPEED | WHITE |
| 10 | | | DIMMER SPEED | WHITE FINE |
| 11 | | | | STROBE |
| 12 | | | | COLOR TEMPERATURE |
| 13 | | | | AUTO PROGRAM |
| 14 | | | | AUTO SPEED |
| 15 | | | | DIMMER SPEED |

TOUR

| 4 Ch "2" | 6 Ch "2" | 10 Ch "2" | 15 Ch "2" | FUNCTION | DMX Value | Default |
|----------|----------|-----------|-----------|---|---|---------|
| | 1 | 1 | 1 | DIMMER 0÷100% | 000 ÷ 255 | 000 |
| | | | 2 | DIMMER FINE 0÷100% | 000 ÷ 255 | 000 |
| 1 | 2 | 2 | 3 | RED 0÷100% | 000 ÷ 255 | 255 |
| | | | 4 | RED FINE 0÷100% | 000 ÷ 255 | 255 |
| 2 | 3 | 3 | 5 | GREEN 0÷100% | 000 ÷ 255 | 255 |
| | | | 6 | GREEN FINE 0÷100% | 000 - 255 | 255 |
| 3 | 4 | 4 | 7 | BLUE 0÷100% | 000 ÷ 255 | 255 |
| | | | 8 | BLUE FINE 0÷100% | 000 ÷ 255 | 255 |
| 4 | 5 | 5 | 9 | WHITE 0÷100% | 000 ÷ 255 | 255 |
| | | | 10 | WHITE FINE 0÷100% | 000 ÷ 255 | 000 |
| | 6 | 6 | 11 | STROBE No Function Strobe Slow to Fast | 000 ÷ 010 011 ÷ 255 | 255 |
| | | 7 | 12 | COLOR TEMPERATURE Color Mix 2800K 3200K 3500K 4000K 4500K 5000K 5600K 6000K 6500K Color Mix | 000 ÷ 005 006 ÷ 030 031 ÷ 055 056 ÷ 080 081 ÷ 105 106 ÷ 130 131 ÷ 155 156 ÷ 180 181 ÷ 205 206 ÷ 230 231 ÷ 255 | 000 |
| | | 8 | 13 | AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 (Auto Program1-4) | 000 ÷ 010 011 ÷ 060 061 ÷ 110 111 ÷ 160 161 ÷ 210 211 ÷ 255 | |
| | | 9 | 14 | AUTO SPEED Auto speed slow to fast | 000 ÷ 255 | |
| | | 10 | 15 | DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed) | 000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255 | |