

# DMX CHARTS

Channel	Uno	Basic	Standard	Extended
1	DIMMER COARSE	DIMMER COARSE	DIMMER COARSE	DIMMER COARSE
2		DIMMER FINE	DIMMER FINE	DIMMER FINE
3			STROBE	STROBE
4				CONTROL

Uno	Basic	Standard	Extended	Function	DMX Value	Default
1	1	1	1	<b>DIMMER COARSE</b> 0÷100%	000 ÷ 255	000
	2	2	2	<b>DIMMER FINE</b> 0÷100%	000 ÷ 255	000
		3	3	<b>STROBE</b> Close Strobe from slow to fast Open Pulse In from slow to fast Open Pulse Out from slow to fast Open Random from slow to fast Open	0 ÷ 1 2 ÷ 62 63 ÷ 64 65 ÷ 125 126 ÷ 127 128 ÷ 188 189 ÷ 190 191 ÷ 251 252 ÷ 255	255
			4	<b>CONTROL</b> No Function/Safe DISPLAY ON DISPLAY 10S DISPLAY 20S DISPLAY 30S FLIP DISPLAY ON FLIP DISPLAY OFF KEY LOCK ON KEY LOCK OFF DIMMER CURVE LINEAR DIMMER CURVE S-CURVE DIMMER CURVE SQUARE LAW DIMMER CURVE INVERSE SQUARE LAW DIMMER SPEED AUTO DIMMER SPEED FAST DIMMER SPEED MEDIUM DIMMER SPEED SLOW LED FREQUENCY 600HZ LED FREQUENCY 1200HZ LED FREQUENCY 2000HZ LED FREQUENCY 4000HZ LED FREQUENCY 6000HZ LED FREQUENCY 25KHZ FAN MODE AUTO FAN MODE SILENT FAN MODE HIGH FAN MODE OFF NO SIGNAL HOLD NO SIGNAL BLACKOUT NO SIGNAL STAND ALONE Reserved FACTORY DEFAULT OF CONTROL FUNCTIONS	0 ÷ 1 2 ÷ 3 4 ÷ 5 6 ÷ 7 8 ÷ 9 10 ÷ 11 12 ÷ 13 14 ÷ 15 16 ÷ 17 18 ÷ 19 20 ÷ 21 22 ÷ 23 24 ÷ 25 26 ÷ 27 28 ÷ 29 30 ÷ 31 32 ÷ 33 34 ÷ 35 36 ÷ 37 38 ÷ 39 40 ÷ 41 42 ÷ 43 44 ÷ 45 46 ÷ 47 48 ÷ 49 50 ÷ 51 52 ÷ 53 54 ÷ 55 56 ÷ 57 58 ÷ 59 60 ÷ 253 254 ÷ 255	000