

DMX CONTROL

5 CHANNELS

| MODE 5 Ch | FUNCTION | DMX Value |
|--------------|------------------------|--------------|
| 1 | RED 0~100% | 000 - 255 |
| 2 | GREEN 0~100% | 000 - 255 |
| 3 | BLUE 0~100% | 000 - 255 |
| 4 | WHITE 0~100% | 000 - 255 |
| 5 | ZOOM 0~100% | 000 - 255 |

7 CHANNELS

| MODE 7 Ch | FUNCTION | DMX Value |
|--------------|--|---|
| 1 | DIMMER 0~100% | 000 - 255 |
| 2 | RED 0~100% | 000 - 255 |
| 3 | GREEN 0~100% | 000 - 255 |
| 4 | BLUE 0~100% | 000 - 255 |
| 5 | WHITE 0~100% | 000 - 255 |
| 6 | STROBE No Function (shutter open) Slow to fast No Function (shutter open) Random slow to fast No Function (shutter open) | 000 - 030 031 - 100 101 - 130 131 - 200 201 - 255 |
| 7 | ZOOM 0~100% | 000 - 255 |

11 CHANNELS

| MODE 11 Ch | FUNCTION | DMX Value |
|---------------|-------------------------|--------------|
| 1 | DIMMER 0~100% | 000 - 255 |
| 2 | RED 0~100% | 000 - 255 |
| 3 | GREEN 0~100% | 000 - 255 |

11 CHANNELS

| MODE 11 Ch | FUNCTION | DMX Value |
|---------------|--|--|
| 4 | BLUE 0~100% | 000 - 255 |
| 5 | WHITE 0~100% | 000 - 255 |
| 6 | STROBE No Function (shutter open) Slow to fast No Function (shutter open) Random slow to fast No Function (shutter open) | 000 - 030 031 - 100 101 - 130 131 - 200 201 - 255 |
| 7 | ZOOM 0~100% | 000 - 255 |
| 8 | COLOR FUNCTION No Function Color presets White presets Color macro | 000 - 010 011 - 085 086 - 170 171 - 255 |
| 9 | COLOR PRESETS RGB 100%, 0~100%, 0% RGB 0~100%, 100%, 0% RGB 0%, 100%, 0~100% RGB 0%, 0~100%, 100% RGB 0~100%, 0%, 100% RGB 100%, 0%, 0% ~ 100% RGB 100%, 0% ~ 100%, 0% ~ 100% RGB 100% ~ 0%, 100% ~ 0%, 100% RGBW 0%~100%,0%~100%, 100%, 0%~100% WHITE PRESETS 2000K ~ 3000K (R=250, G=180, B=0, W=50) 3000K ~ 4000K (R=255, G=220, B=0, W=130) 4000K ~ 6000K (R=235, G=210, B=0, W=255) 6000K ~ 8000K (R=195, G=210, B=80, W=255) 8000K (R=170, G=210, B=105, W=255) | 000 - 028 029 - 056 057 - 084 084 - 112 113 - 140 141 - 168 169 - 196 197 - 224 225 - 255 000 - 195 196 - 210 211 - 225 226 - 240 241 - 255 |
| | COLOR MACRO Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 | 000 - 060 061 - 110 111 - 160 161 - 210 211 - 255 |
| 10 | COLOR MACRO SPEED Color macro speed slow to fast | 000 - 255 |
| 11 | DIMMER FADE Preset dimmer speed from display menu 0~100% | 000 - 000 000 - 255 |