

# DMX CHARTS

Ch	4 Ch	6 Ch	10 Ch
1	RED	DIMMER	DIMMER
2	GREEN	RED	RED
3	BLUE	GREEN	GREEN
4	WHITE	BLUE	BLUE
5		WHITE	WHITE
6		STROBE	STROBE
7			COLOR FUNCTION
8			COLOR PRESETS WHITE PRESETS COLOR MACRO
9			COLOR MACRO SPEED
10			DIMMER FADE

4 Ch	6 Ch	10 Ch	Function	DMX Value	Default
	1	1	<b>DIMMER</b> 0÷100%	000 ÷ 255	000
1	2	2	<b>RED</b> 0÷100%	000 ÷ 255	000
2	3	3	<b>GREEN</b> 0÷100%	000 ÷ 255	000
3	4	4	<b>BLUE</b> 0÷100%	000 ÷ 255	000
4	5	5	<b>WHITE</b> 0÷100%	000 ÷ 255	000
	6	6	<b>STROBE</b> No function Strobe Slow to fast No function Random strobe effect slow to fast No function	000 ÷ 030 031 ÷ 100 101 ÷ 130 131 ÷ 200 201 ÷ 255	255
		7	<b>COLOR FUNCTION</b> No Function Color presets White presets Color macro	000 ÷ 010 011 ÷ 085 086 ÷ 170 171 ÷ 255	000
		8	<b>COLOR PRESETS</b> <b>active when Color function is on Color presets</b> RGB 100%, 0~100%, 0% RGB 0~100%, 100%, 0% RGB 0%, 100%, 0~100% RGB 0%, 0-100%, 100% RGB 0~100%, 0%, 100% RGB 100%, 0%, 0% ~ 100% RGB 100%, 0% ~ 100%, 0% ~ 100% RGB 0% ~ 100%, 0% ~ 100%, 100% RGBW 100%, 100%, 100%, 100% <b>WHITE PRESETS</b> <b>active when Color function is on White presets</b> RGBW 2000K ~ 3000K RGBW 3000K ~ 4000K RGBW 4000K ~ 5000K RGBW 5000K ~ 6000K RGBW 6000K ~ 7000K RGBW 7000K ~ 8000K RGBW 8000K ~ 9000K RGBW 9000K ~ 10000K <b>COLOR MACRO</b> <b>active when Color function is on Color macro</b> Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 (Auto program1 - 4)	000 ÷ 028 029 ÷ 056 057 ÷ 084 085 ÷ 112 113 ÷ 140 141 ÷ 168 169 ÷ 196 197 ÷ 224 225 ÷ 255  000 ÷ 040 041 ÷ 070 071 ÷ 100 101 ÷ 130 131 ÷ 160 161 ÷ 190 191 ÷ 220 221 ÷ 255  000 ÷ 060 061 ÷ 110 111 ÷ 160 161 ÷ 210 211 ÷ 255	000
		9	<b>COLOR MACRO SPEED</b> Color macro speed slow to fast	000 ÷ 255	000
		10	<b>DIMMER FADE</b> Dimmer fade from fast to slow <i>Slow is the same of DIMMER3 (the slowest)</i>	000 ÷ 255	000