


STUDIOCOBPLUS FC

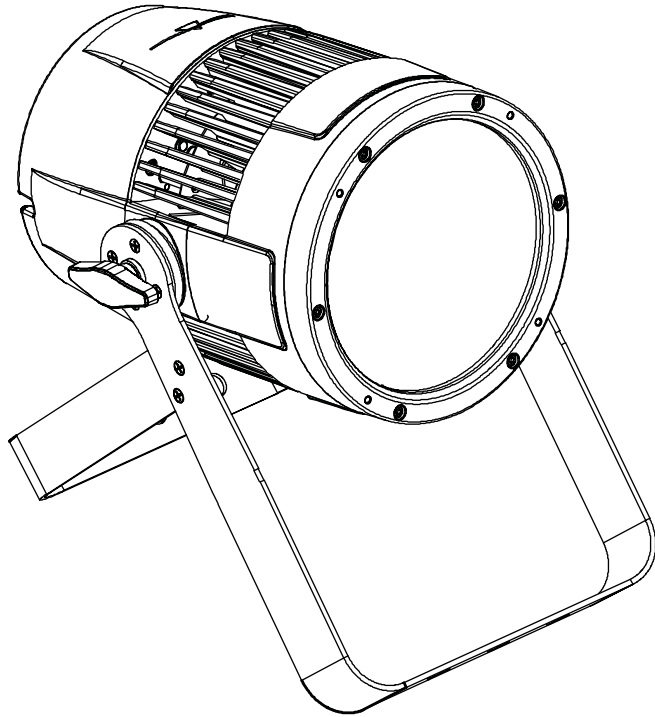

DMX CHART

3 Ch

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

6 Ch

MODE 5 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
5	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

10 Ch

MODE 8 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255

4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast No function Random strobe Slow to Fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
7	COLOR FUNCTION (next channel function) No function Color preset White preset Color macro	000 - 010 011 - 085 085 - 170 171 - 100
8	COLOR Color Preset (fade change) R 100% G 0~100% B 0% R 100%~0% G 100% B 0% R 0% G 100% B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% B 100%~0% R 100% G 0%~100% B 0%~100% R 100%~0% G 100%~0% B 100% R 100% G 100% B 100% W 100% White Preset (fade change) 2000K ~ 3000K 3000K ~ 4000K 4000K ~ 5000K 5000K ~ 6000K 6000K ~ 7000K 7000K ~ 8000K 8000K ~ 9000K 9000K ~ 10000K Color Macro Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 (Auto program 1~ 4)	000 - 028 029 - 056 057 - 084 084 - 112 113 - 140 141 - 168 169 - 196 197 - 224 225 - 255 000 - 040 041 - 070 071 - 100 101 - 130 131 - 160 161 - 190 191 - 220 221 - 255 000 - 060 061 - 110 111 - 160 161 - 210 211 - 255
9	COLOR MACRO SPEED Slow to Fast	000 - 255
10	DIMMER FADE Dimmer curve Fast to Slow	000 - 255